Digital Spectrum
Incorporated

NuVue™ Model NV-560

User Manual

Table of Contents

1. Introduction 3
2. Package Contents 3
3. About the Digital Photo Frame 4
4. Getting Started 4
4.1 Using the Stand 4
4.2 Mounting the Frame on the Wall 5
4.3 Connecting the Power 5
4.4 Inserting & Removing the Flash Memory Cards 5
5. Photos and Images 7
5.1 Viewing Photos 7
5.2 On Screen Controls 9
6. Troubleshooting 9
7. Specifications 10

1. Introduction

Congratulations! You are the proud owner of a NuVue[tm] Digital Picture Frame. Boasting high-quality image resolution the NuVue[tm] is the perfect product for displaying your favorite digital photos. With its ease of use and configuration, you can now display all your favorite pictures for everyone to see!

Safety Instructions

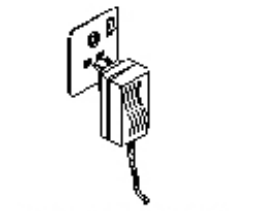

Do not plug your power adaptor into the wall socket while the cable is plugged into your player

Do not bend the power cord or grab the adaptor with wet hand. This may result in electric shock or fire.

Do not expose your player to moisture, dirt or soot. It may cause damage.

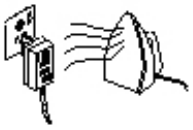

Keep the power cord away from objects that produce heat.

Avoid water or chemicals Clean only with dry cloth.

Do not dismantle, repair or modify the player.

Do not keep a button pressed. It may result in abnormal operation.

Do not leave the player in a place subject to high temperature, altitude or humidity.

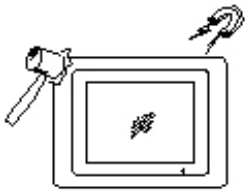

Avoid impacting the player and keep it away from magnetic forces or excessive vibration.

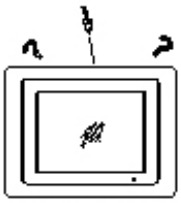

Connect AC adaptor firmly and correctly.

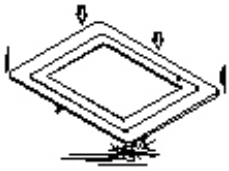

Avoid dropping! Dropping the player may cuase damage of the built-in hard disc or screen.

2. Package Contents

Before using the NuVue[tm], be sure to check all the accessories contained in the package. NuVue[tm] comes with the following items:

1. NuVue[tm] unit with desktop stand
2. A.C. Power Adapter
3. User Manual

3. About the Digital Photo Frame

This section describes the various parts of the Digital Photo Frame.

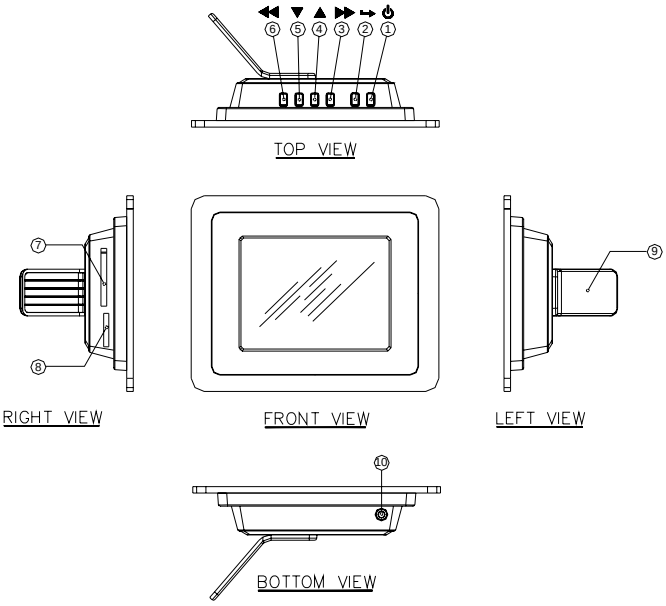

	Items	Functions
①	Power / Menu	Turn the Digital Photo Frame on and off.
②	Enter	Press to display menu or to confirm a setting or function
③	Forward	Used to navigate forwards.
④	Up	Used to navigate upwards.
⑤	Down	Used to navigate downwards.
⑥	Back	Used to navigate backwards.
⑦	CF Card Slot	Slot for CF card.
⑧	3 in 1 Card Slot	Slot for SD/MMC/MS
⑨	Desktop Stand	Placing the Digital Photo Frame on a desk..
⑩	DC In Receptacle	Power Connection to the adaptor.

4. Getting Started

This section is used to familiarize you with preparing the unit for operation and use as defined below.

4.1 Using the Stand

The Digital Photo Frame can be placed in a landscape or portrait position on a desk or any other flat surface by removing the screw on the stand of the Digital Photo Frame.

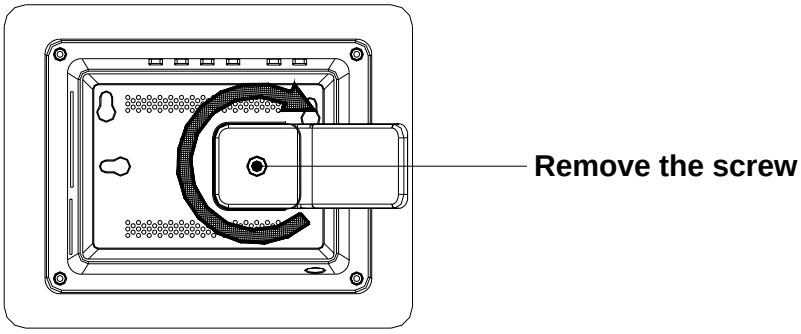

4.2 Mounting the Frame on the Wall

Digital Photo Frame can also be mounted on the wall in landscape or portrait position by placing the hanging holes “A” at the rear housing of Digital Photo Frame over the screw or nail in the wall.

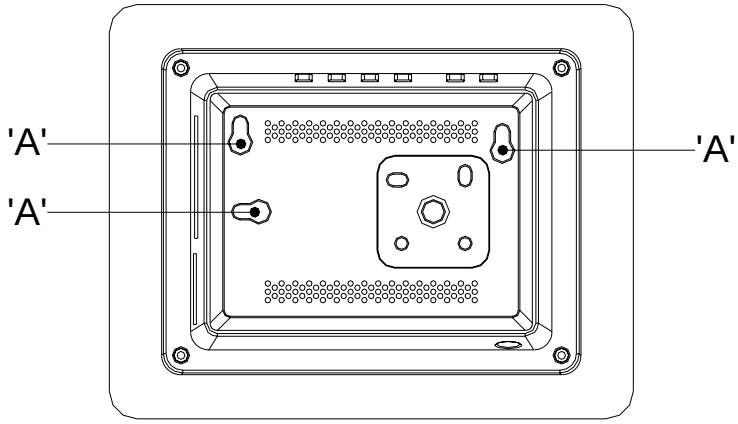

4.3 Connecting the Power

Connect the AC Power Adapter to the AC wall outlet and plug the other end of the AC adapter to the DC-In jack of Digital Photo Frame.

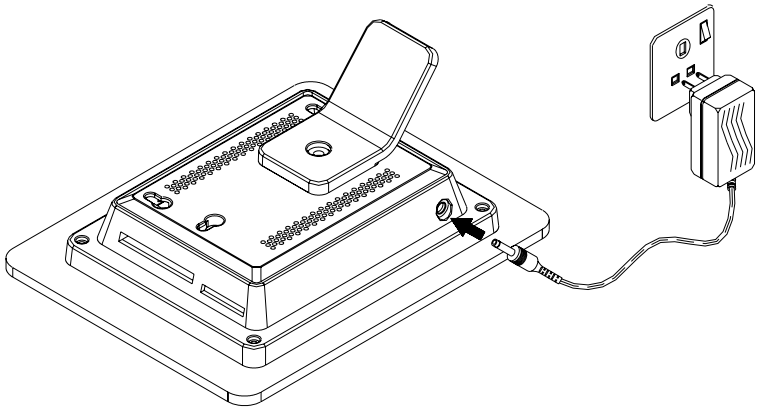

4.4 Inserting & Removing the Flash Memory Cards

Removing and inserting different multi-media cards is convenient and easy. Please see below for details for each card type.

4.5 Inserting a CF Card

1. Position the CF card so that the pin-hole connections are facing the bottom flash memory card slot. Place the card label side up.
2. Slide the card gently into the slot until it seats in the bottom of the slot.

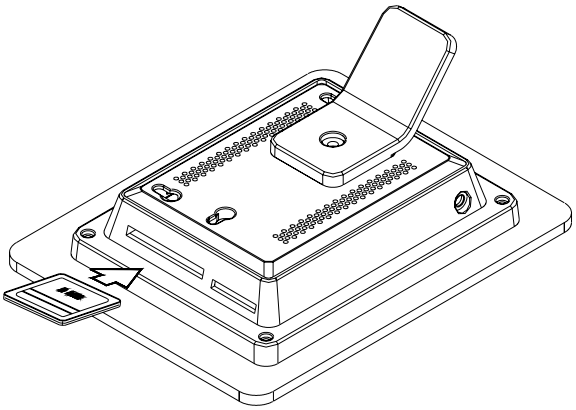

4.6 Inserting Other Types of Cards (SD/MMC/MS)

1. Position the SD/MMC/MS cards so that the pin hole connections are facing the bottom flash memory card slot. Place the card label side up.
2. Slide the card gently into the slot until it touches the bottom.

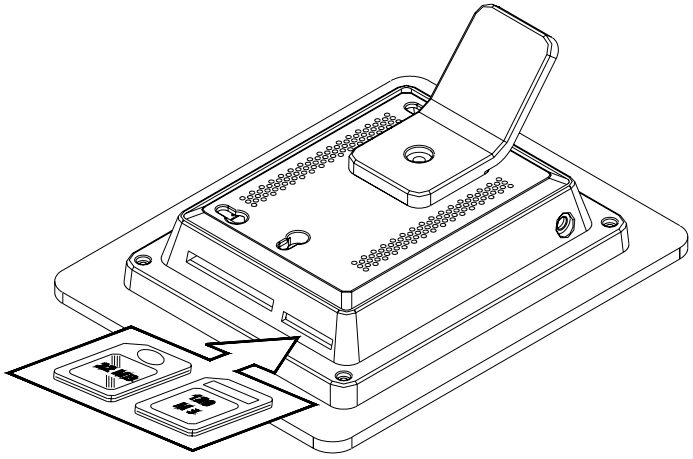

4.7 Removing a Memory Card

To remove a memory card, gently pull the card out of the slot.

5. Photos and Images

You can view single images or play in a continuous slideshow as noted below. Images must be JPEG format to be viewed properly.

5.1 Viewing Photos

To Turn On the Digital Photo Frame

Ensure that the power is connected as described in *Connecting the Power*.
Press the **Power** button for three seconds to turn the unit On.

When you turn On unit, it will automatically display a splash screen while booting.

After 3 seconds, if you do not insert any media card, the screen will display the message "Please insert media card"

When you insert the media card, it will auto play from the card.

Press the "**Enter**" button to change between Manual and Slideshow mode.

Press "**Up**" and "**Down**" buttons to display the previous and next photos.

Thumbnail View

You can view photos as thumbnails.

While the display in Slideshow mode, press "**Enter**" button to change to Manual mode and press the "**Left**" or "**Right**" buttons to switch to thumbnail preview mode.

While the display is in thumbnail preview mode,

Press the "**Enter**" button to change to Slideshow mode.
Press the "**Up**" or "**Down**" buttons to select the previous or next page to view more photos.

Press the "**Menu**" button to activate the OSD (On Screen Display) Mode.

To power Off the Digital Photo Album

Press the "Power" button for about three seconds to turn it off. A screen showing the machine shutting down is displayed.

5.2 On Screen Controls

OSD Menus	Sub-Menus	Description and Function of Operation
Slide Speed	5s / 10s / 30s / 60s / 1hr / 8hrs / 1d	Select Speed of Slide Show
Photo Rotate	Left	Rotate image counter-clockwise 90
	Right	Rotate image clockwise 90
Information	Off	No display of “EXIF” information
	Camera	Display camera make, camera model, date taken, F-stop, exposure time
	Basic	Memory source--SD/ MMC/ CF/ MS Filename / File size / Width x Height
	All	Camera + Basic
Brightness	Brightness Bar	As it towards to the right, it get brighter
Contrast	Contrast Bar	As it towards to the right, it get stronger

Troubleshooting

Problem	Possible Causes	What to do
No display on LCD screen.	No power supply	Check the connection of AC adaptor and the unit.
	LCD Brightness at min level.	LCD Brightness might be at min level, toggle brightness up switch.
	LCD connector or LCD gone bad	Contact Authorized Customer Care
Abnormal operation	No power supply or abnormal image on LCD panel	Disconnect the power adapter from the amin unit and reconnect back again.
Memory card not accessible	Memory cards are not inserted correctly.	Insert the memory cards again.
	Faulty flash memory card or external USB device	Use a different memory card.

7. Specifications

Model	Nu Vue 560
Image Format	Up to 6.6M pixels JPEG photos following EXIF and DCF standards
Placement support	Landscape , Portrait
Control buttons	6 buttons : Power/Menu, Enter, Up, Down, Left Right Display mode Automatic slideshow, Full screen browse, Thumbnails browse 9 pics, Slide show interval/speed 5,10,30,60 sec,1 hour, 8 hour, 1 day Transition mode 16 types
OSD Language	English
Media types	CompactFlash TM Card typeI/typeII (CF), SecureDigital (SD), Multimedia Card (MMC), Memory Stick (MS)
Power requirements	DC 5 V @ 2A
Display	Effective display area 113.28 (w) x 84.704(h) mm, 5.6" diagonal Vertical dot pitch 0.362 mm Horizontal dot pitch 0.118 mm Resolution 320 x 234 pixels Viewing angle 300:1
Included accessories	AC power adaptor Quick start guide Desktop stand
Unit Dimension	165 (h) x 210 (w) x 35 (d) mm
Weight	1 lb.

Digital Spectrum
Incorporated

NuVue™

Digital Spectrum Solutions, Inc.
17811 Mitchell North
Irvine, Ca. 92614
www.dsicentral.com
1862-N5-YG-4